

Quick Start Guide HS-10DTB2-4GB

Thank you for purchasing the Hip Street **Equinox 2** and we hope you enjoy using it

Please visit our website at www.hipstreet.com. We have a Frequently Asked Questions FAQ section where you will find answers to most of your questions. If you do not find an answer there, please use the option to contact our technical support department and kindly send us an email detailing your question and we will get back to you promptly.


 

Kindly read and retain all the operating instructions before operating the unit. We cannot assume any liability that may arise out of improper operation or incidental/accidental damages. The contents of this user manual are subject to change based on newer developments.

Customer and Technical Support: 1-888-456-2426
Monday through Friday: 8:30 am – 5:00 pm EST



Note: We recommend that you fully charge your Hip Street tablet before using it for the first time. Using it right out of the box will not hurt it but the battery will not be fully charged so you will have reduced operating time.

To Charge: Insert the small plug end of the AC Adapter provided into the jack on the right side of the unit (marked on the back as “DC5V”) and then plug the other end into an electrical outlet. It is recommended that you charge the unit the first time for at least 6 hours.



Power On/Off

On: Press and hold the **Power**  button until the device turns on. The lock screen will then appear with  on the right side of the screen. Touch and hold this icon and slide it to the right to the unlock icon on the screen. Slide it to the left to enter the Camera mode. **Off:** Press and hold the **Power Button**  for 4 seconds. You will be asked if you would like to shut down, tap **OK**.

Navigating the Main Menu Screen/Using the Device

This is a capacitive touch screen display. Simply touch the function icon you wish to select. When reading an eBook, for example, use the touch screen display by swiping your finger across the screen from right to left to go forward or left to right to go backward. Touch the  icon in the bottom left corner of the screen to return to the previous screen/exit. Touching the  icon will take you back to the Widget screen.

Set Date and Time

After you have unlocked the tablet, tap  in the top right corner on the Widget Desktop. Tap on the Settings Icon . On the left hand side, scroll down the tabs and select the **Date & Time** option. There is an Automatic option but it requires the Wi-Fi to be connected to a network in order to provide the correct time. If there is a checkmark in the box on the right side of the Automatic option and you wish to set the time and date manually, touch the Automatic line to remove the checkmark.


To **set the time** - touch the **Select Time Zone** option and scroll up and down through the list until you reach your desired time zone. Touch the time zone to select it. You may select either the 12 hour or 24 hour clock option. Then touch **Set Time** and use the **up or down** symbols above or below the numbers to change them.

To **change the date**, touch **Set Date** and again use the **up or down** symbols above or below the month, date and year to change the numbers. When finished, touch **Set**. If you decide to use the Automatic option to synchronize the time and date with the internet provided values,

simply touch the Automatic line again and the checkmark will appear on the right side to indicate that the Automatic feature has been set.

Using Wi-Fi:

Please follow the instructions below to use the built-in Wi-Fi module. **In order to use this feature and download items to your tablet, you must be able to connect to an available Wi-Fi network.**

Touch the **Settings** icon  in the Application Menu. Slide the Wi-Fi switch to the **ON** position. Touch the **Wi-Fi** line and all local Wi-Fi networks will appear on the right. Almost all wireless networks are password protected. In order to connect to a specific wireless network you will need to know the password for the network you select. Without the correct password you will not be able to use the Wi-Fi feature unless there is an open Wi-Fi network available (such as in some well known coffee shops or Wi-Fi “hot spots”). You can also select the **Add Network** but you must know the Network SSID name, type of security and the correct password. Once entered you must touch save.



Please note that in most cases a wireless network will assign an IP (Internet Protocol) address automatically.

Once you are connected to the Wi-Fi network you may then proceed to search the internet using the Browser installed, set up the email function, obtain eBooks using the Wi-Fi network instead of via your computer, or use the SlideMe Marketplace icon to search for applications (APK's) that you want to download to your tablet. **Note:** If you are downloading non-Google applications (APK's) you must go to **Settings > Security > Unknown sources** and ensure the checkmark is in the box on the right.

Downloading eBooks to your tablet

Free eBooks

For instance, in the Free eBooks section you may connect directly to sites like the web sites shown following, using the built-in Browser (Free eBooks are available from a variety of web sites such as www.freebookspot.cc, www.gutenberg.org, www.manybooks.net and www.ebooks.com or you may also

search the internet for sites offering “free eBooks”). Drag the  icon on the right side of the screen towards the right to unlock the tablet, and then touch the Browser icon. The browser will open. Touch the search bar and the keyboard will appear. Enter the desired web site into the search bar and then touch either the Search icon [] or GO on the bottom right of the keyboard. Touch one of the sites that appear and proceed to select and download free eBooks.

Using a computer:

Free eBooks

You may download free eBooks and MP3 music to your tablet from a computer. You must first download the eBooks or music of your choice to your computer. Free eBooks are available from a variety of web sites such as www.freebookspot.cc, www.gutenberg.org, www.manybooks.net and www.ebooks.com or you may also search the internet for sites offering “free eBooks”.

To transfer eBooks to your tablet, first make sure both the computer and tablet are turned on. Connect the tablet to your computer using the USB cable provided. Touch **Turn on USB storage** on the tablet when prompted. Click START and then open My Computer/Computer where your tablet should show in a pop up window as a Removable Disk. The USB Mass Storage feature must be turned on if the Removable Disk window does not appear.

You may now either copy and paste or drag and drop the eBooks or MP3 music files from your computer to the tablet. When finished please use the Safely Remove Hardware icon to remove your device from the computer. Click on the small window that says “Safely Remove USB Mass Storage Device – Drive ___” You may now disconnect your device from the computer.

Reminder: If you have your tablet connected to your computer for any reason, before disconnecting from computer ensure you left-click on the Safely Remove Hardware icon in the lower right taskbar and select the tablet drive to be removed. Unplug tablet when message to safely remove appears.